

ABBAU

❶ Remove all pegs and release the cords. The pegs are stored in the accessory bag.

❷ Store the guylines in the Cord Stuffsacks. Simply insert three fingers into the Cord Stuffsack, wrap the tent cord around your fingers and then turn the stuffsack inside out like with a pair of socks.

❸ Now stuff the tarp into the packsack.

TIPS AND TRICKS

Before leaving on your next adventure, check that your tarp is complete and free of damage.


To secure the pegs in loose earth, sand or snow, wrap the tarp cord around the center of the peg and bury it horizontally. You can also use the packsack filled with sand or snow, or use the Exped Snow and Sand Anchors available separately.

Never light a stove in a tarp as it is a fire hazard.

The seams of a silicone coated tarp fly cannot be factory seam taped. For water resistance a special cotton wrap polyester core thread is used. This thread expands when wet, sealing the stitch holes. Should this not be enough, a special silicone seam sealer can be applied (e.g. Seamgrip SIL by McNett).

A sandy or dirty tarp is best sprayed down with a water hose and a sponge. Do not machine wash.

Dry and air your tarp thoroughly prior to storage. This process may take a couple of days. Store the tarp in a dry area away from direct sunlight.

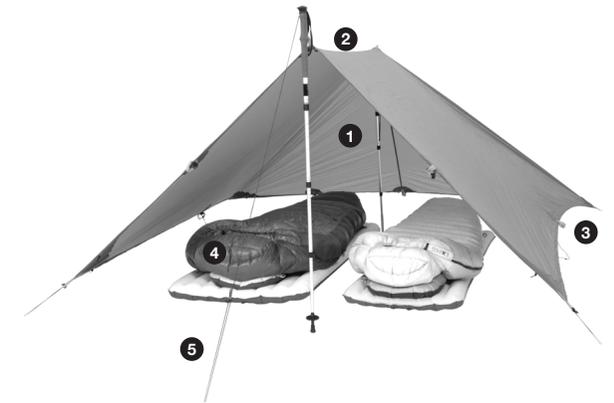

INSTRUCTIONS SCOUT TARP EXTREME ENGLISH

EXPED TARPS

Thank you for purchasing an Exped tarp. Innovation, quality and refined details distinguish them from all others.

The Scout Tarp Extreme has a windward side for enhanced weather protection. Tensioning down the windward side makes it stormproof. When used in snow, peg down securely and dig a trench at the entrance to create a safe and cozy shelter

❶ **Windshield** wards off wind, sand and snow.

❷ The **stuffsack** double as anchor pocket for a central support. As A-Frame paddle, trekking pole, ski, poles oder branches can be used.

❸ The **shock cord** of the perimeter seam keeps the tarp sides under tension.


❹ **Cord Stuffsacks** prevent tangling of tent cords during packing. Simply insert three fingers into the Cord Stuffsack, wrap the tent cord around your fingers and then turn the stuffsack inside out like with a pair of socks.

❺ **Guy lines** For perfect setup there are numerous pre-mounted guy lines attached to the tent. Our Dyneema guy lines are reflective and buckles allow stepless adjustment.


CONTENTS

Scout tarp extreme with integrated stuff sack, accessory bag (guy lines, cord stuffsacks, pegs)

AUFBAU

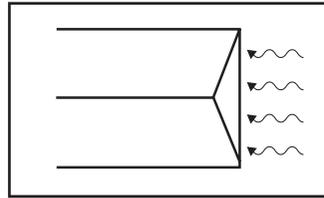

❶ Place the windward side facing the wind.

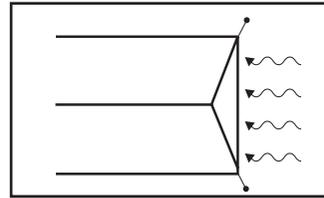

❷ Secure the narrow side with two pegs.



❸ The stuffsack double as anchor pocket for a central support. Supports must have rounded edges to prevent damage to the fabric. Cover sharp edges with soft materials.



❹ Tie a guyline to the central loop of the opposite narrow end, attach a trekking pole or similar support to the guyline and tension (creates the door of tent).



❺ Stake down the front corners



❻ Adjust concealed rubber cord in the seams surrounding the tarp to tension the tarp sides as required.

SETUP OPTIONS

Variation of the Wedge-A frame tent

Instead of staking down the corners, stake down the two central loops. Use a shorter support in the stuffsack and shorten the front pole. This creates a lower structure that offers less resistance to wind.

A-Frame

Tie cord between two trees, slip the tarp over the cord and anchor the corners with pegs or guylines. Depending on the height of the cord the sides will reach the ground or a gap to the ground will remain.

IMPORTANT! La stabilité optimale du tarpe n'est garantie que si la tension est correcte. Le tissu en nylon absorbe l'humidité, se dilate et se contracte à nouveau une fois sec. Par conséquent, la tente doit régulièrement être remise en tension.