

## TEARDOWN

❶ Clean and close all zippers. Remove all pegs and release the tent cords. The pegs are stored in the accessory bag.

❸ Next, remove the ridge pole from its front and rear peak grommets and then carefully remove the pole ends from the lower grommets.

❹ Carefully disassemble the poles and place them in the pole sack.

❷ Unclip the fly from all poles.

**Note!** The poles are under tension before you release them from the grommets.

❺ No need to remove the inner tent, it should remain attached to the fly. Spread out the tent with the floor on the ground side. Fold the vestibules inward, then fold the long sides of the tent in thirds so the width corresponds to the stuff sack length.



❻ Place the full accessory bag at one end of the folded tent as a rolling aid and roll the tent tightly.



❼ Slip the rolled tent into the stuff sack and tighten the compression straps.

## TIPS AND TRICKS

Before leaving on your next adventure, check that your tent is complete and free of damage. Check the tent poles for cracks and burrs.

Appropriate ventilation can prevent condensation within the tent. Vent the tent regularly by at least opening the doors partially at the upper end.

To secure the pegs in loose earth, sand or snow, wrap the tent cord around the center of the peg and bury it horizontally. You can also use the packsack filled with sand or snow, or use the Exped Snow and Sand Achors available separately.

**Note!** Never light a stove in a tent as it is a fire hazard or can lead to carbon monoxide poisoning.

Should your tent remain stationary over a longer period, protect it from UV by placing a cheap tarp over it.

A tent footprint (available separately) protects the tent floor from damage and can also reduce condensation build up.

For more information visit: [exped.com](https://www.exped.com).



**INSTRUCTIONS  
OUTER SPACE**  
ENGLISH

## EXPED TENTS

Thank you for purchasing an EXPED tent. Innovation, quality and refined details distinguish them from all others.


As with all of our tents in the 3-season category, two-thirds of the Outer Space's canopy is made of airy and finely woven mesh. This allows good views out of the tent and the canopy can be used on its own as a bug tent.

- 1 Easy to use **clips** allow quick setup.
- 2 **Exostructure poles** allow dry set-up.
- 3 **Guylines** Our tent cords allow quick and stepless adjustment.
- 4 The **fabric panels** of the canopy serve as wind and privacy screens.
- 5 **Cord Stuffsacks** prevent tangling of tent cords during packing. Simply insert three fingers into the Cord Stuffsack, wrap the tent cord around your fingers and then turn the stuffsack inside out like with a pair of socks.


### CONTENTS

Canopy and rainfly; accessory bag with tent poles, pegs, repair tube, additional guylines; packsack


### SET UP

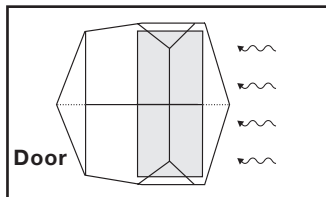

1 Unpack: Un-roll the tent fly-side up. A footprint protects the floor from damage (available separately).

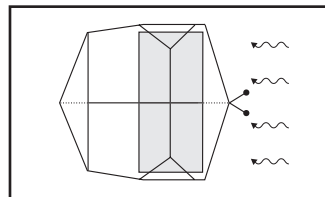

2 If windy, secure with two pegs at the rear (smaller) vestibule end of the tent (red webbing), facing the wind. In strong winds, open both front and rear fly doors to prevent ballooning and the tent from taking flight.

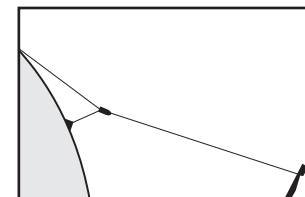

7 Before staking to the ground, take this opportunity to re-position the tent for maximum comfort (wind, roots, rocks, slope, etc.) Any tent is made much more stable in wind when properly tensioned, staked and guyed. At a minimum, one stake at each vestibule can be sufficient in light weather. For greater strength and weather resistance,

additional stakes through all anchor loops at the pole ends are recommended. In all cases, stability is increased by tightening the stake lines via the buckles at the base of each vestibule, as well as the fly-tensioners at the base of each pole. In strong wind, use of the included guy lines strengthens the structure.



3 Carefully deploy the pole segments. Insert the ends of the canopy poleset into the color coded grommets.



4 Dock the pole set of the large vestibule to the canopy, then insert the pole ends into the yellow grommets left and right of the entrance.



5 Insert the poles ends of the ridge pole into the central grommets above both entrances.



6 To erect the tent, simply attach clips to poles, beginning with the 4 ridge clips. Attach the remaining clips, higher to lower, until tent is fully suspended from the poles.

### SET UP MODES



#### 1 Party Mode

The canopy has been disconnected and temporarily pushed aside.

#### 2 Porch Mode

Fly is deployed, doors are open and rolled back.

#### 3 Living-room mode

Sleeping gear remains tucked away in the canopy.